Quick start guide

Hatchback · Electric · UK (right-hand drive)
English

Contents

1 Before you set off 3
2 Airbags 4
3 Starting and switching off 5
4 Setting the clock 6
5 Refuelling and charging 7
6 Warning lights 8
7 Jacking and hot parts 9
8 Changing a wheel 10

1 Before you set off

This guide shows the first things you need with your Fenna Hatchback: starting, setting the clock, filling up and what to do with a flat tyre.

The owner's manual describes everything else, and has all the safety notices.

2 Airbags

⚠ DANGER



Front passenger airbag and rear-facing child seats

An airbag that inflates in front of a rear-facing child seat can kill the child.

- Never fit a rear-facing child seat on the front passenger seat while the front passenger airbag is switched on.
- Switch the airbag off with the key switch in the glovebox. The indicator **PASSENGER AIRBAG OFF** must light up.

⚠ WARNING



Sitting too close to an airbag

An inflating airbag can injure people who sit too close to it or lean against the door.

- Keep at least 25 cm between your chest and the steering wheel.
- Never put objects, covers or stickers on the airbag covers.

3 Starting and switching off

The vehicle starts with the key in your pocket: no key needs to be inserted.

Start the vehicle

1. Press the brake pedal and hold it.
2. Press the **START/STOP** button.

   The petrol engine starts. On the electric model, the display shows **READY**: the vehicle is ready to drive, without a sound.
3. Select **D** or **R** and release the parking brake.

Switch the vehicle off

1. Stop and select **P**.
2. Apply the parking brake.
3. Press the **START/STOP** button.

4 Setting the clock

The vehicle sets the clock automatically from the navigation signal. You can also set it by hand.

Set the clock

1. In the centre display, open **Settings** › **Date and time**.
2. Switch **Automatic time** off.
3. Set the hours and minutes with the arrows, then tap **Save**.

Note
With automatic time on, the clock also changes to summer time and back by itself.

5 Refuelling and charging

The filler flap or charging flap is on the left rear wing. Press its rear edge to open it.

Charge the vehicle

1. Open the charging flap.

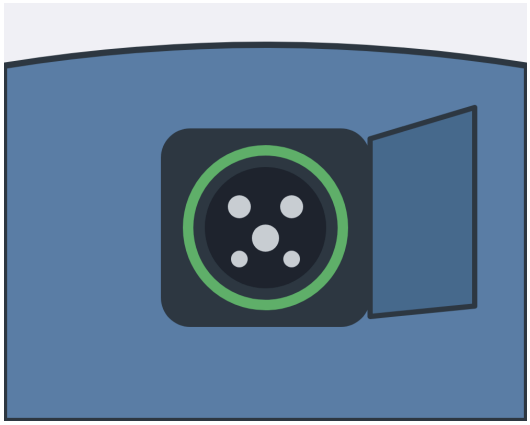

2. Plug in the charging cable until it locks. The light ring around the socket flashes green while the battery charges.
3. To stop charging, unlock the vehicle and pull the plug out.

At a wall box with 11 kW the battery charges from 10 % to 80 % in about 4 hours; at a fast charger with 100 kW in about 30 minutes.

6 Warning lights

A red light means: stop as soon as it is safe. A yellow light means: have it checked soon.

Table 1: Warning lights and what to do

Light	What to do
Brake system (red)	Stop. Check the brake fluid level. Do not drive on.
Airbag (red)	Have the airbag system checked straight away.
Tyre pressure (yellow)	Check the tyre pressures and correct them.
12 V battery (red)	Stop and call roadside assistance.
Reduced power (yellow)	Drive on carefully and have the vehicle checked.

7 Jacking and hot parts

⚠ DANGER



Vehicle falling off the jack

A vehicle on a jack can slip and crush anyone underneath it.

- Never lie or reach under a vehicle that stands only on the jack.
- Use only the jacking points marked on the sill.

⚠ CAUTION



Hot brakes and exhaust

After driving, brake discs and, on the petrol model, the exhaust can be hot enough to burn skin.

- Let the wheels cool down before you touch the brakes.

8 Changing a wheel

The spare wheel, the jack and the wheel brace are under the floor of the load space.

Stop on firm, level ground away from traffic, apply the parking brake and switch on the hazard warning lights.

Put on a high-visibility vest. On a motorway, set up no warning triangle: leave the vehicle and wait behind the safety barrier. Elsewhere, set it up at least 45 m behind the vehicle.

Change the wheel

1. Loosen the wheel bolts by one turn while the wheel is still on the ground.
2. Place the jack under the jacking point nearest the wheel and raise the vehicle until the wheel is clear of the ground.

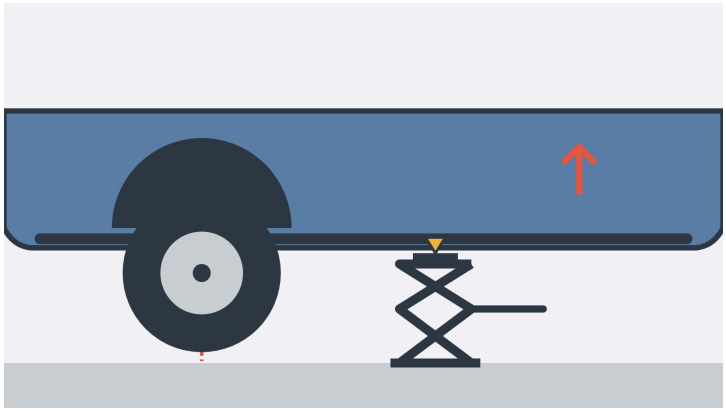

3. Remove the wheel bolts and take the wheel off.
4. Fit the spare wheel and screw in the wheel bolts by hand.
5. Lower the vehicle and tighten the wheel bolts crosswise.

Check the pressure of the spare wheel as soon as you can, and have the damaged tyre repaired or replaced.